



TIPS AND TRICKS

TITANIUM® WIPER BLADE INSTALLATION

BEAM HOOK
APPLICATIONS ONLY

Part numbers

604477, 604478, 604479
604480, 604481, 604482
604483, 604484, 604485
604486, 604487, 604488

WIPER BLADE INSTALLATION WITH HOOK ATTACHMENT




IDENTIFYING WIPER BLADE CONNECTION

***THIS TECHNICAL BULLETIN ONLY APPLIES TO HOOK STYLE CONNECTIONS**

INSTALLING BEAM HOOK WIPER BLADE

1. Remove Valeo Titanium® Beam wiper blade from packaging.
2. Inspect the pre-installed wiper connector for proper hook style adapter installation onto the blade. Ensure the adapter is securely clicked onto the wiper blade by pushing down on the top of the adapter.
3. Follow steps below for installing the wiper blade to the wiper arm:

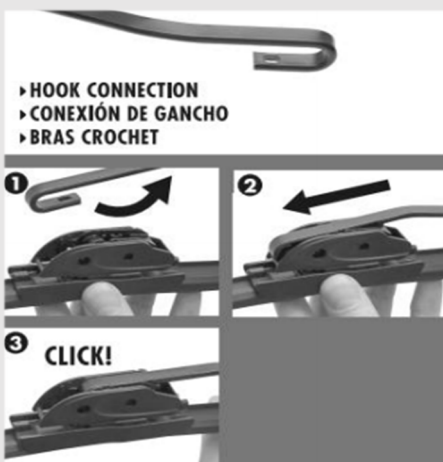

- 3a. Position the wiper blade connector under and behind the wiper arm hook.
- 3b. Once aligned, slide the wiper blade towards the end of the hook and apply pressure until you hear a *click*.
- 3c. Once you hear the *click*, pull back gently to ensure the wiper is securely installed to the arm.

***NOTE: ONCE INSTALLED, DO NOT AGGRESIVELY PULL OR TWIST THE CONNECTOR AS THIS MAY CAUSE DAMAGE TO THE ADAPTER RESULTING IN PREMATURE FAILURE**



Please visit us @
valeoservice.us



Technical Assistance
1-888-718-2536
Press option #2 for technical support





- ▶ HOOK CONNECTION
- ▶ CONEXIÓN DE GANCHO
- ▶ BRAS CROCHET

